

Ì

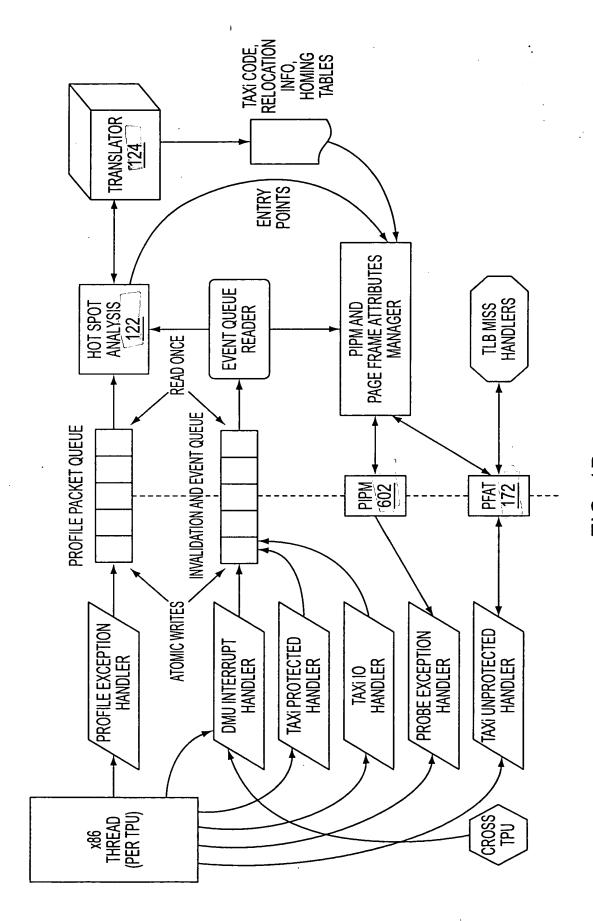
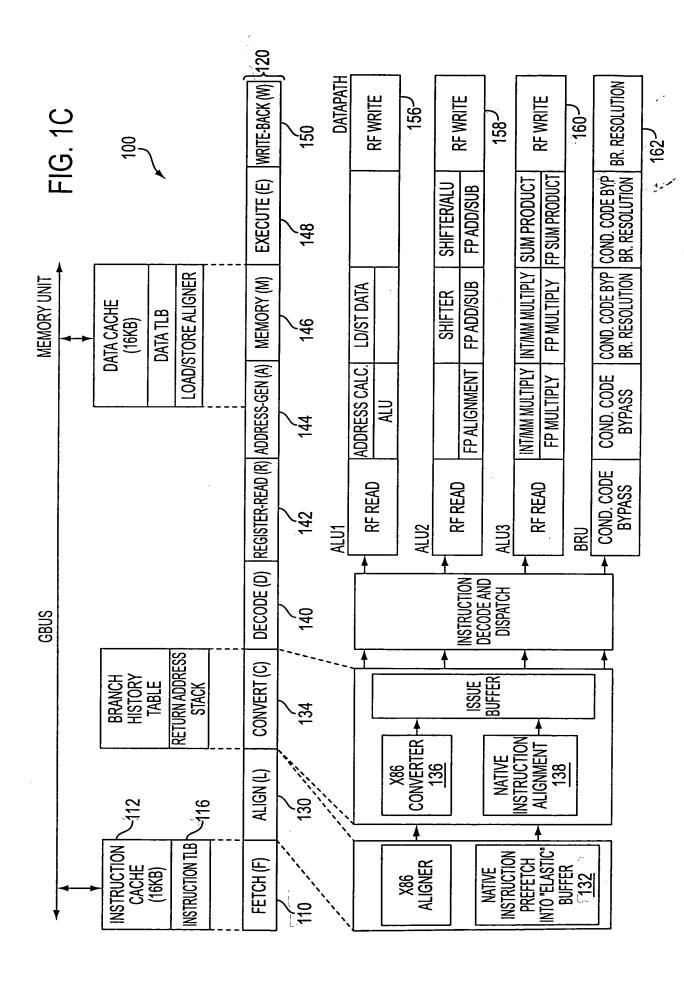


FIG. 1B




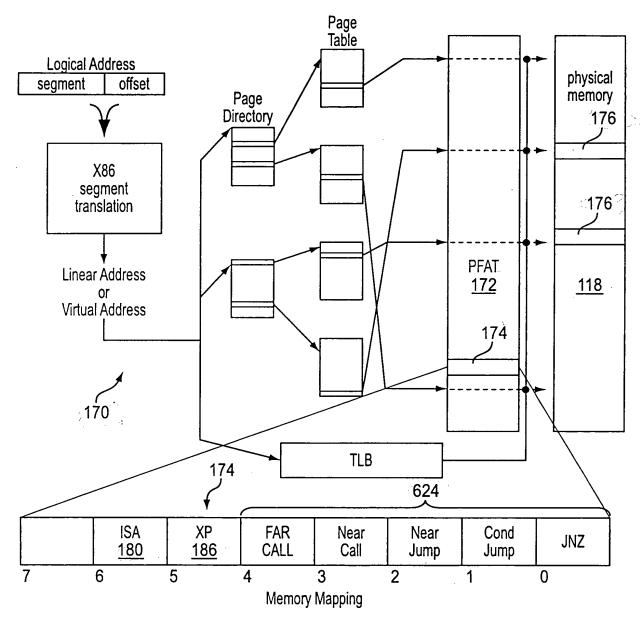


FIG. 1D

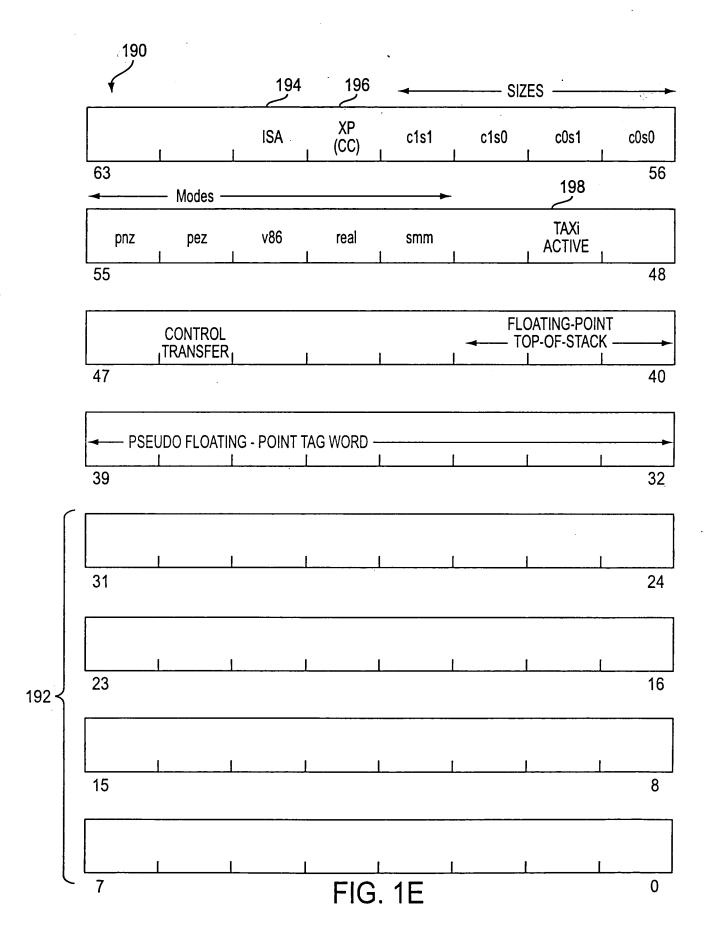

J-TLB DECODED PROPE VALUES				PROTECTED	INSTRUCTIONS	COLLECT PROFILE	PROBE FOR	I/O MEMORY
PROPERTY BITS	ISA 194	CC 200		INTERPRETATION	SENT TO:	TRACE- PACKETS?	TRANSLATED CODE	REFERENCE EXCEPTIONS
00	TAP	TAP	NO	NATIVE CODE OBSERVING NATIVE RISCy CALLING CONVENTIONS	native Decoder	NO	NO	FAULT IF SEG.tio
01	TAP	x86	NO	NATIVE CODE OBSERVING x86 CALLING CONVENTIONS	NATIVE DECODER	NO	NO	FAULT IF SEG.tio
10	x86	x86	NO	x86 CODE, UNPROTECTED - TAX! PROFILE COLLECTION ONLY	x86 HW CONVERTER	if Enabled	NO	TRAP IF PROFILING
11	x86	x86	YES	x86 CODE, PROTECTED - TAX! CODE MAY BE AVAILABLE	x86 HW Converter	IF Enabled	BASED ON I-TLB PROBE ATTRIBUTES	TRAP IF PROFILING

180,182, 184,186 184,186

FIG. 2A

204-	\	
242	TRANSITION (SOURCE => DEST) ISA & CC PROPERTY VALUES	HANDLER ACTION
212~	00 => 00	NO TRANSITION EXCEPTION
214	00 => 01	VECT_xxx_X86_CC EXCEPTION - HANDLER CONVERTS FROM NATIVE TO x86 CONVENTIONS
216	00 => 1x	VECT_xxx_X86_CC EXCEPTION - HANDLER CONVERTS FROM NATIVE x86 CONVENTIONS, SETS UP EXPECTED EMULATOR AND PROFILING STATE
218	01 => 00	VECT_xxx_TAP_CC EXCEPTION - HANDLER CONVERTS FROM x86 TO NATIVE CONVENTIONS
220~	01 => 01	NO TRANSITION EXCEPTION
222	01 => 1x	VECT_X86_ISA EXCEPTION [CONDITIONAL BASED ON PCW.X86_ISA_ENABLE FLAG] - SETS UP EXPECTED EMULATOR AND PROFILING STATE
224	1x => 00	VECT_xxx_TAP_CC EXCEPTION - HANDLER CONVERTS FROM x86 TO NATIVE CONVENTIONS
226	1x => 01	VECT_TAP_ISA EXCEPTION [CONDITIONAL BASED PCW.TAP_ISA_ENABLE FLAG] - NO CONVENTION CONVERSION NECESSARY
228	1x => 10	NO TRANSITION EXCEPTION - [PROFILE COMPLETE POSSIBLE, PROBE POSSIBLE]
230	1x => 11	NO TRANSITION EXCEPTION - [PROFILE COMPLETE POSSIBLE, PROBE NOT POSSIBLE]

FIG. 2B

242	NAME	DESCRIPTION	TYPE
242~	VECT_call_X86_CC	PUSHARGS, RETURN ADDRESS, SET UP x86 STATE	FAULT ON TARGET INSTRUCTION
244~	VECT_jump_X86_CC	SET UP x86 STATE	FAULT ON TARGET INSTRUCTION
246	VECT_ret_no_fp_X86_CC	RETURN VALUE TO EAX:EDX, SET UP x86 STATE	FAULT ON TARGET INSTRUCTION
248~	VECT_ret_fp_X86_CC	RETURN VALUE TO x86 FP STACK, SET UP x86 STATE	FAULT ON TARGET INSTRUCTION
250~_ 252~_	VECT_call_TAP_CC	x86 STACK ARGS, RETURN ADDRESS TO REGISTERS	FAULT ON TARGET INSTRUCTION
252	VECT_jump_TAP_CC	x86 STACK ARGS TO REGISTERS	FAULT ON TARGET INSTRUCTION
256	VECT_ret_no_fp_TAP_CC	RETURN VALUE TO RV0	FAULT ON TARGET INSTRUCTION
250~	VECT_ret_any_TAP_CC	RETURN TYPE UNKNOWN, SETUP RV0 AND RVDP	FAULT ON TARGET INSTRUCTION

FIG. 2C

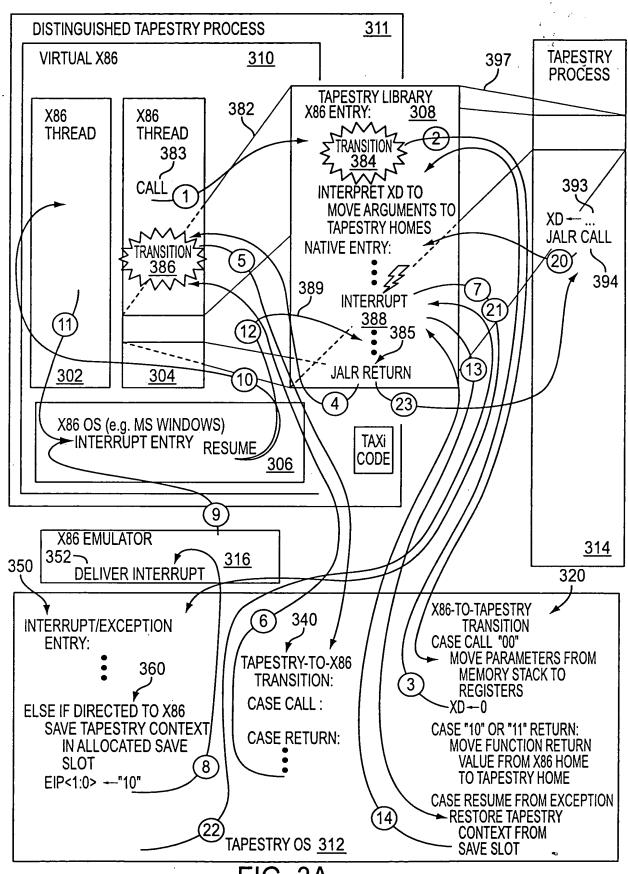


FIG. 3A

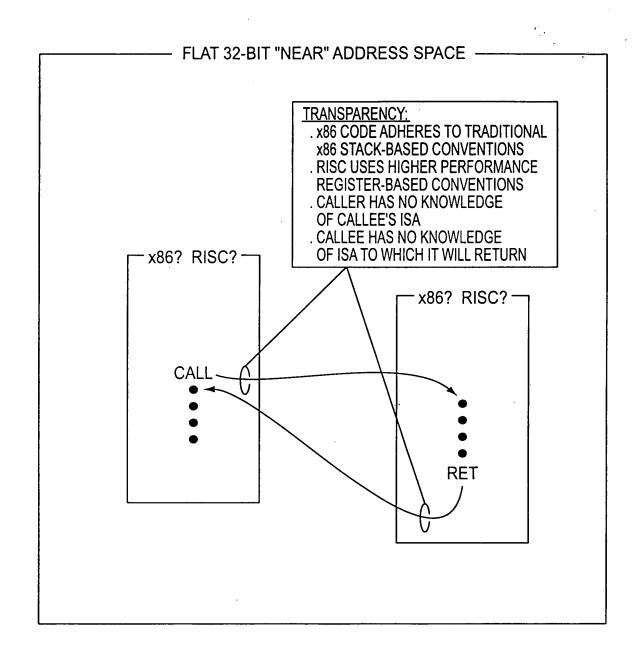


FIG. 3B

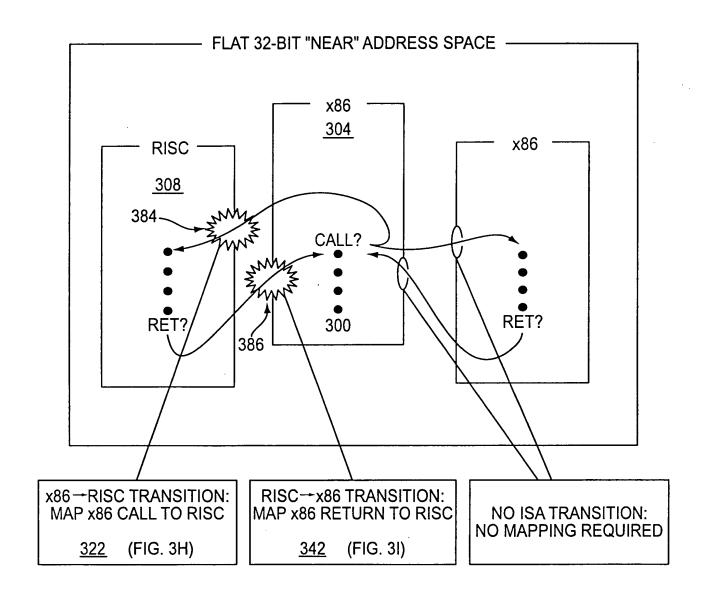


FIG. 3C

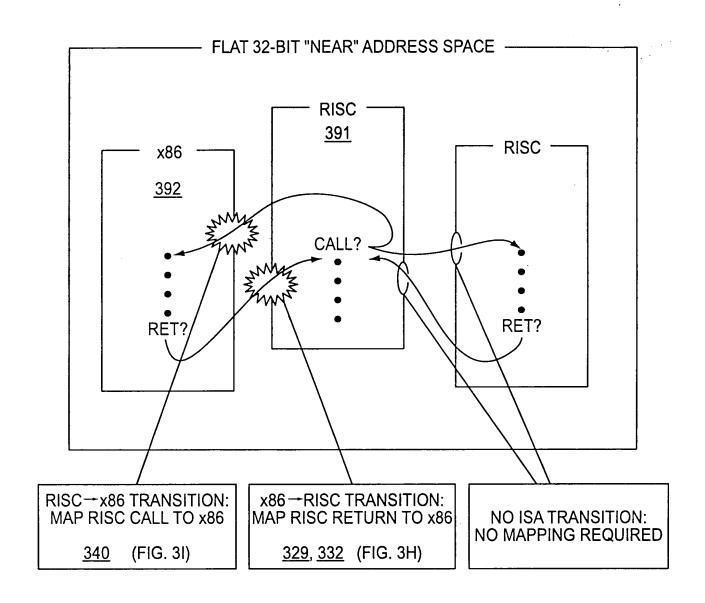


FIG. 3D

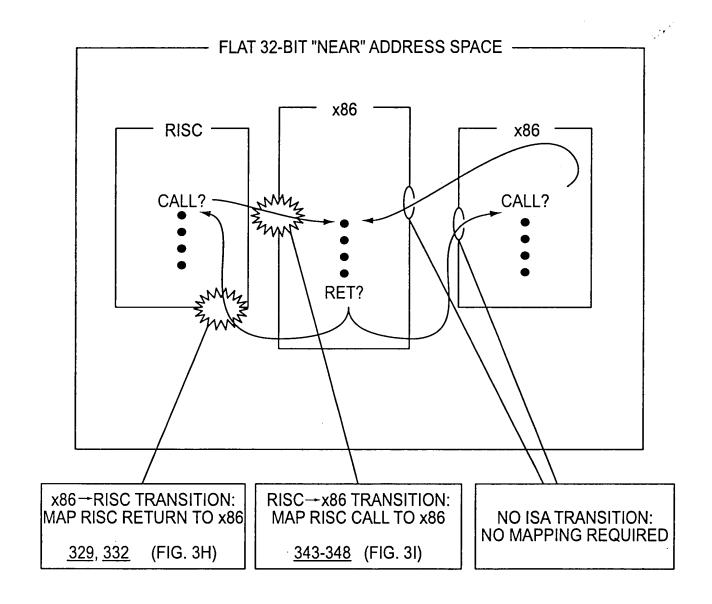


FIG. 3E

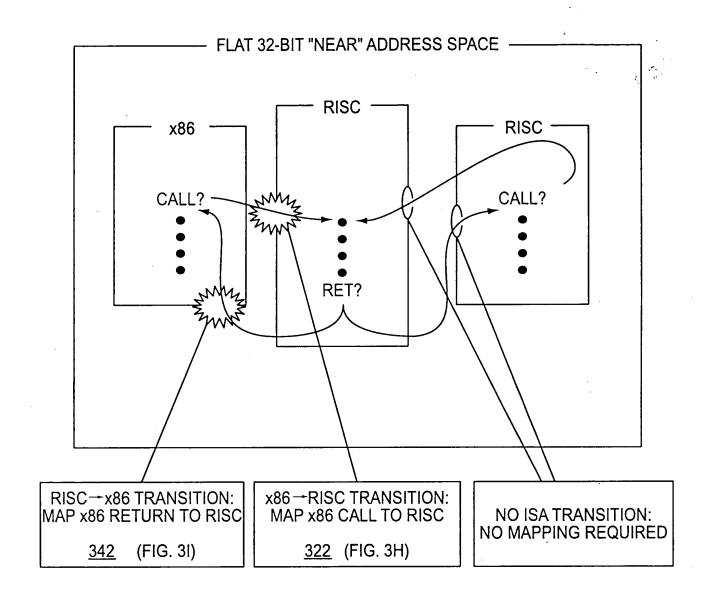


FIG. 3F

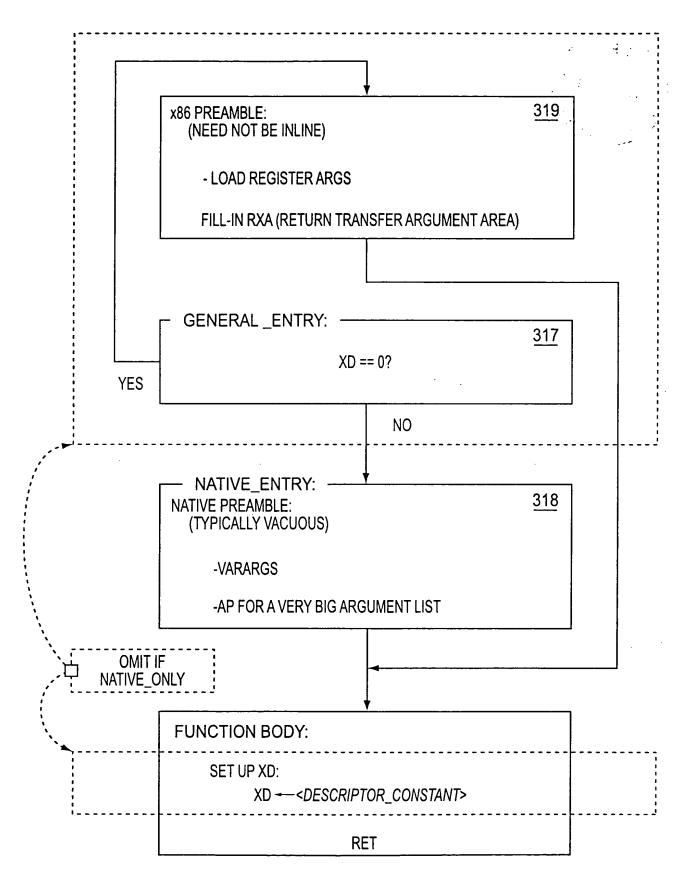


FIG. 3G

```
X86-to Tapestry transition exception handler
    // This handler is entered under the following conditions:
    // 1. An x86 caller invokes a native function
    // 2. An x86 function returns to a native caller
    // 3. x86 software returns to or resumes an interrupted native function following
        an external asynchronous interrupt, a processor exception, or a context switch
            -321
    dispatch on the two least-significant bits of the destination address
                     // calling a native subprogram
        // copy linkage and stack frame information and call parameters from the memory
        // stack to the analogous Tapestry registers
                              // set up linkage register — 323
        LR ←-[SP++]
                               // address of first argument 324
                                                                                                       322
        AP <del>→</del> SP
        SP <del>----</del> SP - 8
                               // allocate return transfer argument area —
        SP <del>→</del> SP & (-32)
                               // round the stack pointer down to a 0 mod 32 boundary
        XD \leftarrow 0
                               // inform callee that caller uses X86 calling conventions \___ 328
    case "01"
                       // resuming an X86 thread suspended during execution of a native routine
        if the redundant copies of the save slot number in EAX and EDX do not match or if
              the redundant copies of the timestamp in EBX:ECX and ESI:EDI do not match {
              // some form of bug or thread corruption has been detected
             goto TAPESTRY_ČRASH_SYSTEM( thread-corruption-error-code ) — 372
        save the EBX:ECX timestamp in a 64-bit exception handler temporary register 373
                                                                                                         -370
              (this will not be overwritten during restoration of the full native context)
        use save slot number in EAX to locate actual save slot storage ____374
        restore full entire native context (includes new values for all x86 registers)
        if save slot's timestamp does not match the saved timestamp { ---376
             // save slot has been reallocated; save slot exhaustion has been detected
             goto TAPESTRY_CRASH_SYSTEM( save-slot-overwritten-error-code ) -
        free the save slot
                        // returning from X86 callee to native caller, result already in registers
    case"10"
        RV0<63:32> --- edx<31:00>
                                                    // in case result is 64 bits -
                                                                                                      332
        convert the FP top-of-stack value from 80 bit X86 form to 64-bit form in RVDP
        SP -ESI
                                                    // restore SP from time of call —
    case"11"
                       // returning from X86 callee to native caller, load large result from memory
        RV0..RV3 — load 32 bytes from [ESI-32] // (guaranteed naturally aligned)
                                                                                                      329
        SP <del>→</del> ESI
                                                   // restore SP from time of call
                              // reset the two low-order bits to zero >
```

```
340
Tapestry-to-X86 transition exception handler
   // This handler is entered under the following conditions:
   // 1. a native caller invokes an x86 function
   // 2. a native function returns to an x86 caller
   switch on XD<3:0> { -
   XD_RET_FP:
                                  // result type is floating point
        SP <del>←</del> from RXA save
                                         // discard RXA, pad, args
        FPCW - image after FINIT & push // FP stack has 1 entry
        goto EXIT
   XD_RET_WRITEBACK:
                                         // store result to @RVA, leave RVA in eax
        RVA ← from RXA save
                                         // address of result area
        copy decode(XD<8:4>) bytes from RV0..RV3 to [RVA]
                                                                                    342
       eax <del>→</del> RVA
                                         // X86 expects RVA in eax
        SP ← from RXA save
                                         // discard RXA, pad, args
        FPCW <del>→</del> image after FINIT
                                                // FP stack is empty
       goto EXIT
   XD RET SCALAR:
                                 // result in eax:eda
       edx<31:00> --- eax<63:32>
                                         // in case result is 64 bits
       SP ← from RXA save
                                         // discard RXA, pad, args
       FPCW ← image after FINIT
                                                 // FP stack is empty
       goto EXIT
   XD_CALL_HIDDEN_TEMP: // allocate 32 byte aligned hidden temp
       esi<del>≺</del>−SP
                                         // stack cut back on return
       // allocate max size temp
       RVA<del>≺</del>—SP
                                         // RVA consumed later by RR
       LR<1:0>→"11"
                                         // flag address for return & reload
       goto CALL_COMMON
   default:
                                 // remaining XD_CALL_xxx encodings
       esi<del>≺</del>−SP
                                         // stack cut back on return ~
       LR<1:0> <del>→</del>-"10"
                                         // flag address for return -
CALL COMMON:
       interpret XD to push and/or reposition args -
       [--SP] <del>---</del> LR
                                         // push LR as return address
EXIT:
       setup emulator context and profiling ring buffer pointer
   ,
RFE - 349
                                         // to original target
```

FIG. 31

```
interrupt/exception handler of Tapestry operating system:
    // Control vectors here when a synchronous exception or asynchronous interrupt is to be
    // exported to / manifested in an x86 machine.
// The interrupt is directed to something within the virtual X86, and thus there is a possibility
// that the X86 operating system will context switch. So we need to distinguish two cases:
// either the running process has only X86 state that is relevant to save, or
// there is extended state that must be saved and associated with the current machine context
        (e.g., extended state in a Tapestry library call in behalf of a process managed by X86 OS)
if execution was interrupted in the converter - EPC.ISA == X86 {
        // no dependence on extended/native state possible, hence no need to save any
        goto EM86_Deliver_Interrupt( interrupt-byte )
} else if EPC.Taxi_Active {
        // A Taxi translated version of some X86 code was running. Taxi will rollback to an
        // x86 instruction boundary. Then, if the rollback was induced by an asynchronous external
        // interrupt, Taxi will deliver the appropriate x86 interrupt. Else, the rollback was induced
                                                                                                        353
        // by a synchronous event so Taxi will resume execution in the converter, retriggering the
        // exception but this time with EPC.ISA == X86
        goto TAXi_Rollback( asynchronous-flag, interrupt-byte )
} else if EPC.EM86 {
        // The emulator has been interrupted. The emulator is coded to allow for such
        // conditions and permits re-entry during long running routines (e.g. far call through a gate)
                                                                                                        354
        // to deliver external interrupts
        goto EM86 Deliver Interrupt(interrupt-byte)
} else {
        // This is the most difficult case - the machine was executing native Tapestry code on
        // behalf of an X86 thread. The X86 operating system may context switch. We must save
        // all native state and be able to locate it again when the x86 thread is resumed.
                <del>-361</del>
        allocate a free save slot; if unavailable free the save slot with oldest timestamp and try again
        save the entire native state (both the X86 and the extended state)
                                                                                        362
        save the X86 EIP in the save slot
        overwrite the two low-order bits of EPC with "01" (will become X86 interrupt EIP)
                                                                                                        -360
        store the 64-bit timestamp in the save slot, in the X86 EBX:ECX register pair (and,
                for further security, store a redundant copy in the X86 ESI. EDI register pair)
        store the a number of the allocated save slot in the X86 EAX register (and, again for
                further security, store a redundant copy in the X86 EDX register)
        goto EM86_Deliver_Interrupt( interrupt-byte ) -
                                                          369
```


350

FIG. 3J

```
typedef struct {
                                          // pointer to next-most-recently-allocated save slot?
    save_slot_t *
                         newer,
                                          // pointer to next-older save slot
    save_slot_t *
                         older;
                                          // saved exception PC/IP
    unsigned int64
                         epc;
                                          // saved exception PCW (program control word)
    unsigned int64
                         pcw;
                                          // save the 63 writeable general registers
    unsigned int64
                         registers[63];
                                          // other words of Tapestry context
    timestamp_t
                         timestamp;
                                          // timestamp to detect buffer overrun
                         save_slot_ID;
                                          // ID number of the save slot -
   int
   boolean
                         save_slot_is_full;
                                                  // full / empty flag
} save_slot_t;
                                                  // pointer to the head of the queue
save_slot_t *
                         save_slot_head;
save_slot_t *
                         save_slot_tail;
                                                  // pointer to the tail of the queue
```

system initialization reserve several pages of unpaged memory for save slots

FIG. 3K

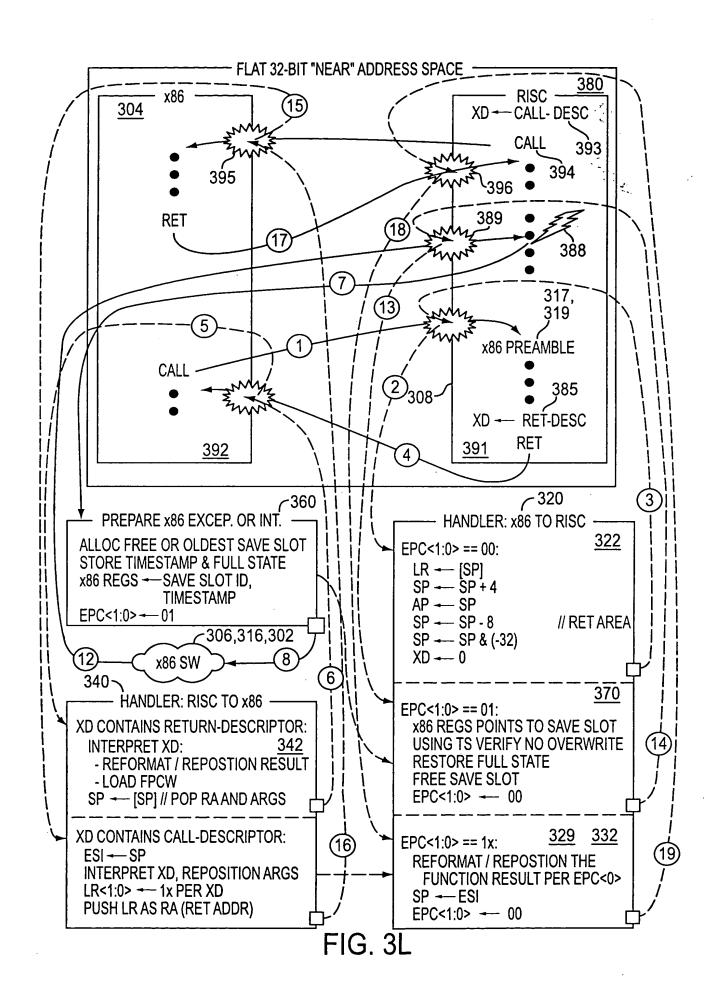

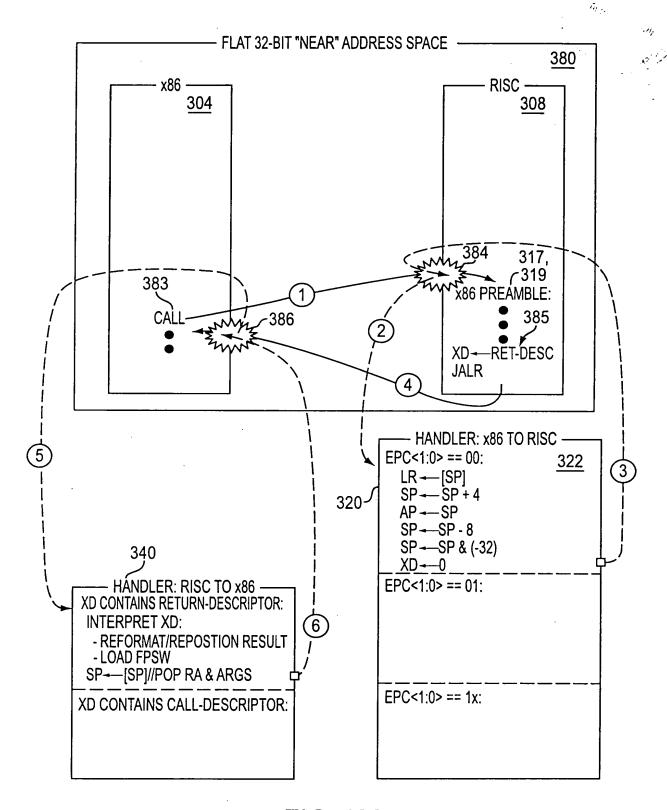


FIG. 3M

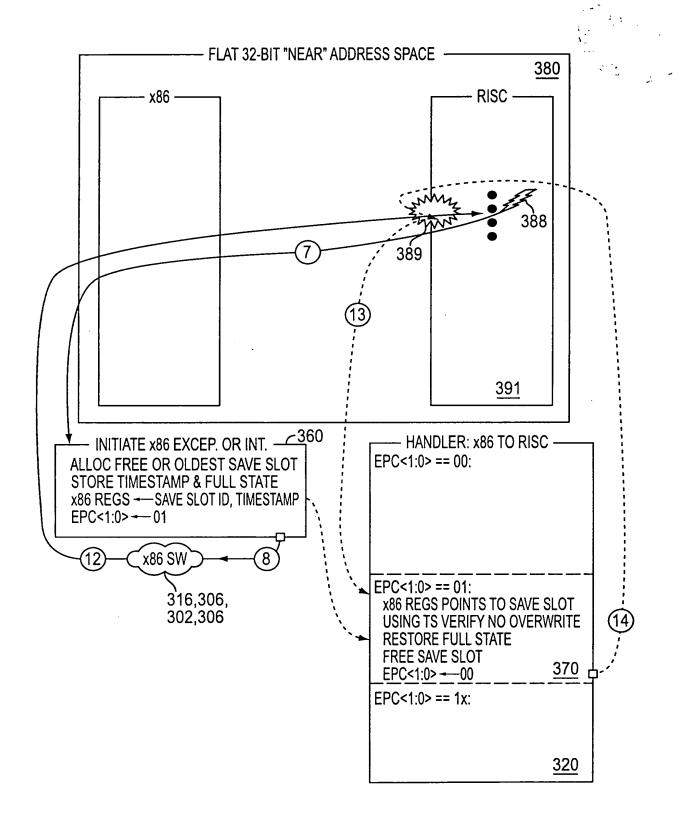


FIG. 3N


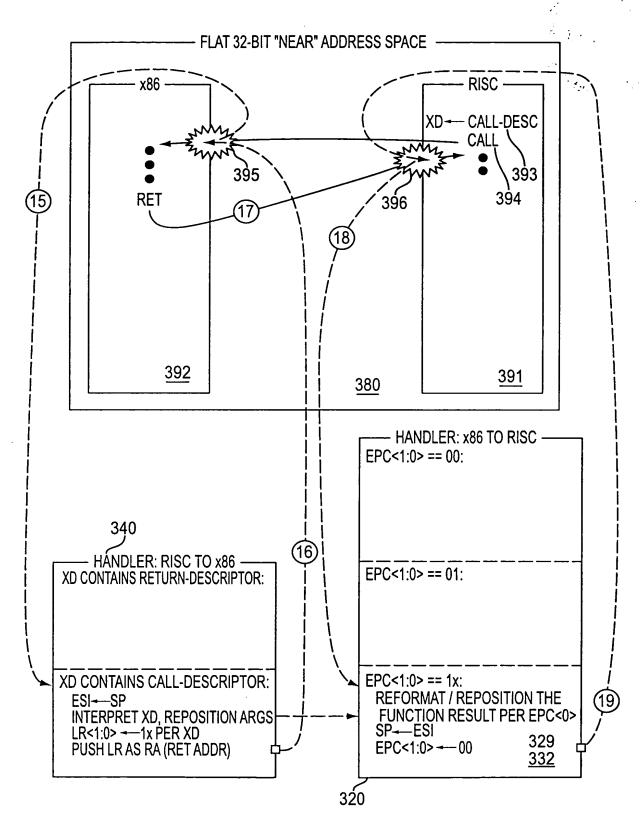


FIG. 30

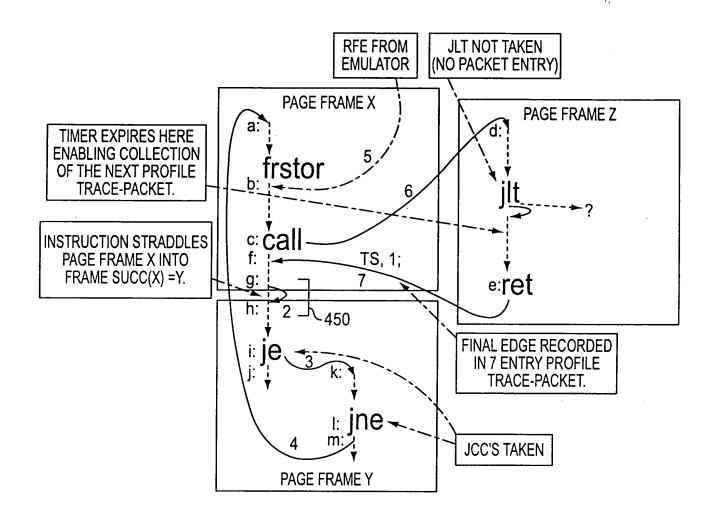



(7 ENTRY T	RACE PACKET		
	ENTRY	EVENT CODE	DONE ADDR	NEXT ADDR	
		64 BIT TI			
	1	RET	x86 CONTEXT	phys X:f	430
	2	NEW PAGE	phys Y:g	phys Y:h	440, 454
420≺	3	JCC FORWARD	phys Y:i	phys Y:k	_
	4	JNZ BACKWARD	phys Y:I	phys X:a	~440 ~440
ı	5	SEQ; ENV CHANGE	x86 CONTEXT	phys X:b	430
	6	IP-REL NEAR CALL	phys X:c	phys Z:d	440
	7	NEAR RET	phys Z:e	phys X:f	_
	•				-440


FIG. 4A


		SO.	URCE	414	PROFILE EVEN	lT .	INITI/ PACK 41	ËΤ	OBEABLE EVENT 610 612
			CODE	EVENT	reuse Event				PROBE EVENT BIT- ITLB PROBE ATTRIBUTE OR
			<u>402</u>		CODE				EMULATOR PROBE
			0.0000	DEFAULT (x86 TRANSPARENT) EVENT, REUSE ALL CONVERTER VALUES	YES		NO		REUSE EVENT CODE
	412		0.0001	SIMPLE x86 INSTRUCTION COMPLETION (REUSE EVENT CODE)	YES		NO		REUSE EVENT CODE
	712		0.0010	PROBE EXCEPTION FAILED	YES		NO		REUSE EVENT CODE
	L		0.0011	PROBE EXCEPTION FAILED, RELOAD PROBE TIMER	YES		NO		REUSE EVENT CODE
	_		0.0100	FLUSH EVENT	NO	NO	NO	NO	•
			0.0101	SEQUENTIAL; EXECUTION ENVIRONMENT CHANGED - FORCE EVENT	NO	YES	NO	NO	•
	RFE		0.0110	FAR RET	NO	YES	YES	NO	•
440	(CONTEXT -		0.0111	IRET	NO	YES	NO	NO	•
410	AT POINT ENTRY)		0.1000	FAR CALL	NO	YES	YES	YES	FAR CALL
	ENIRY)		0.1001	FAR JMP	NO	YES	YES	NO	
			0.1010	SPECIAL; EMULATOR EXECUTION, SUPPLY EXTRA INSTRUCTION DATA	NO	YES	NO	NO	•
			0.1011	ABORT PROFILE COLLECTION	NO	NO	Ю	NO	
			0.1100	x86 SYNCHRONOUS/ASYNCHRONOUS INTERRUPT W/PROBE (GRP 0)	NO	YES	YES	YES	EMULATOR PROBE
			0.1101	x86 SYNCHRONOUS/ASYNCHRONOUS INTERRUPT (GRP 0)	NO	YES	YES	NO	
			0.1110	x86 SYNCHRONOUS/ASYNCHRONOUS INTERRUPT W/PROBE (GRP 1)	NO	YES	YES	YES	EMULATOR PROBE
l	•		0.1111	x86 SYNCHRONOUS/ASYNCHRONOUS INTERRUPT (GRP 1)	NO	YES	YES	NO	•
ſ			1.0000	IP-RELATIVE JNZ FORWARD (OPCODE: 75, OF 85)	NO	YES	YES	NO	•
			1.0001	IP-RELATIVE JNZ BACKWARD (OPCODE: 75, OF 85)	NO	YES	YES	YES	JNZ
			1.0010	IP-RELATIVE CONDITIONAL JUMP FORWARD - (JCC, JCXZ, LOOP)	NO	YES	YES	NO	•
			1.0011	IP-RELATIVE CONDITIONAL JUMP BACKWARD - (JCC, JCXZ, LOOP)	NO	YES	YES	YES	COND JUMP
			1.0100	IP-RELATIVE, NEAR JMP FORWARD (OPCODE: E9, EB)	NO	YES	YES	NO	•
	CONVERTER		1.0101	IP-RELATIVE, NEAR JMP BACKWARD (OPCODE: E9, EB)	NO	YES	YES	YES	NEAR JUMP
	(NEAR_ \ EDGE	ÌΙ	1.0110	RET/RET IMM16 (OPCODE C3, C2 /W)	NO	YES	YES	NO	•
404	ENTRY)		1.0111	IP-RELATIVE, NEAR CALL (OPCODE: E8)	NO	YES	YES	YES	NEAR CALL
404			1.1000	REPE/REPNE CMPS/SCAS (OPCODE: A6, A7, AE, AF)	NO	YES	NO	NO	•
			1.1001	REP MOVS/STOS/LDOS (OPCODE: A4, A5, AA, AB, AC, AD)	NO	YES	NO	NO	•
			1.1010	INDIRECT NEAR JMP (OPCODE: FF /4)	NO	YES	YES	NO	
			1.1011	INDIRECT NEAR CALL (OPCODE: FF /2)	NO	YES	YES	YES	NEAR CALL
			1.1100	LOAD FROM I/O MEMORY (TLB ASI !=0) (NOT USED IN T1)	NO	YES	10	NO	
			1.1101	AVAILABLE FOR EXPANSION	NO	10	10	МО	
			1.1110	DEFAULT CONVERTER EVENT; SEQUENTIAL 406	NO	МО	МО	NO	•
Į	-		1.1111	NEW PAGE (INSTRUCTION ENDS ON LAST BYTE OF A PAGE FRAME OR STRADDLES ACROSS A PAGE FRAME BOUNDARY) 408	NO	YES	NO	NO	
	Į.			EIC 1B					

FIG. 4B

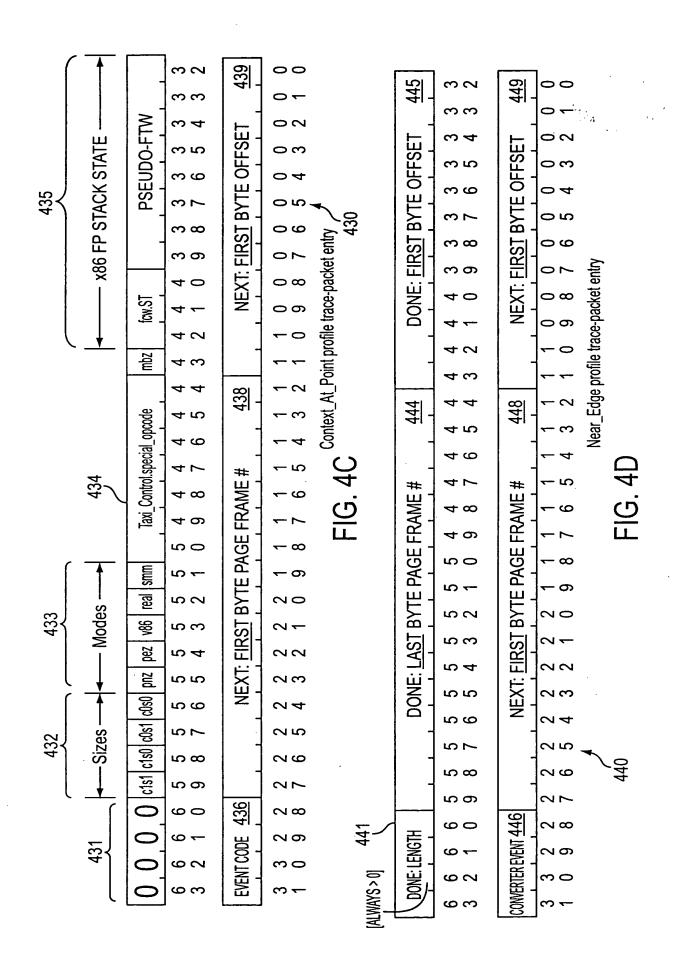

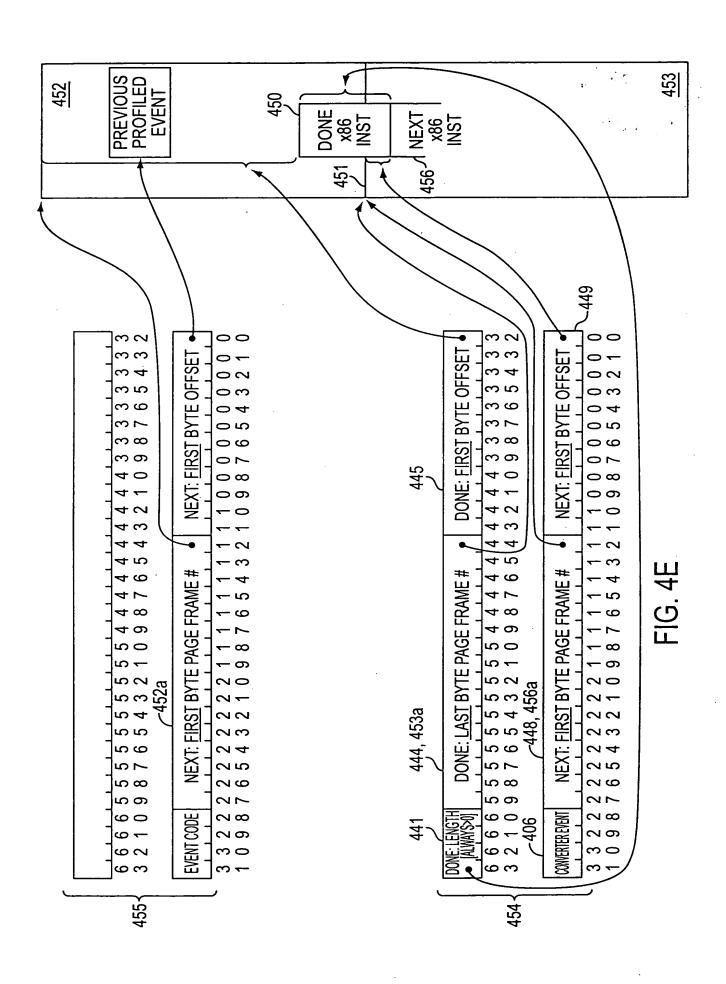


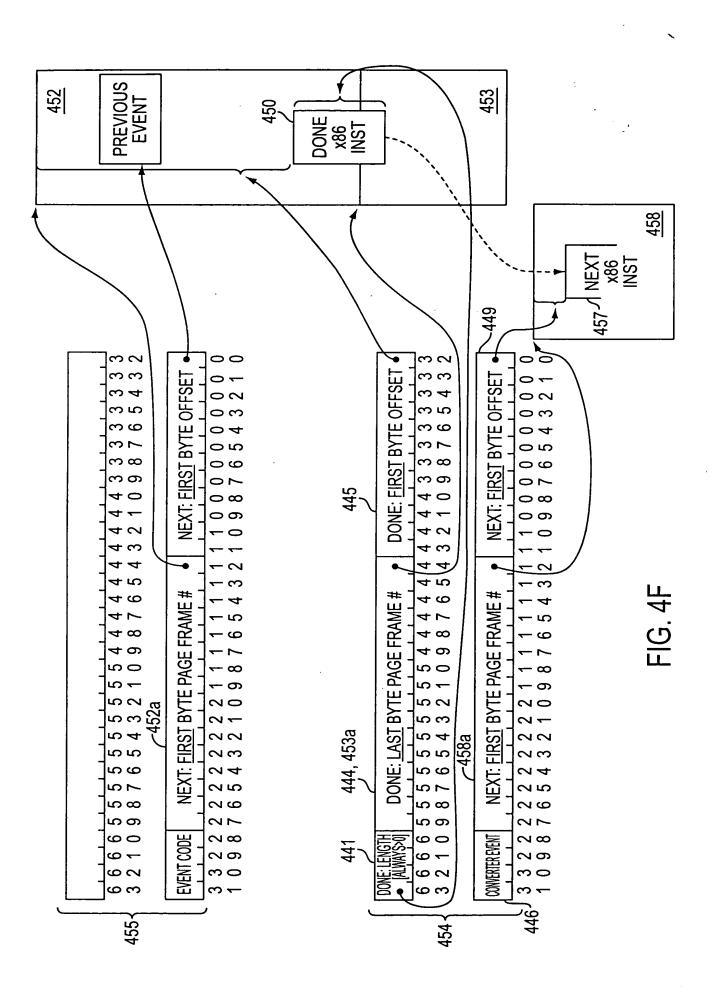

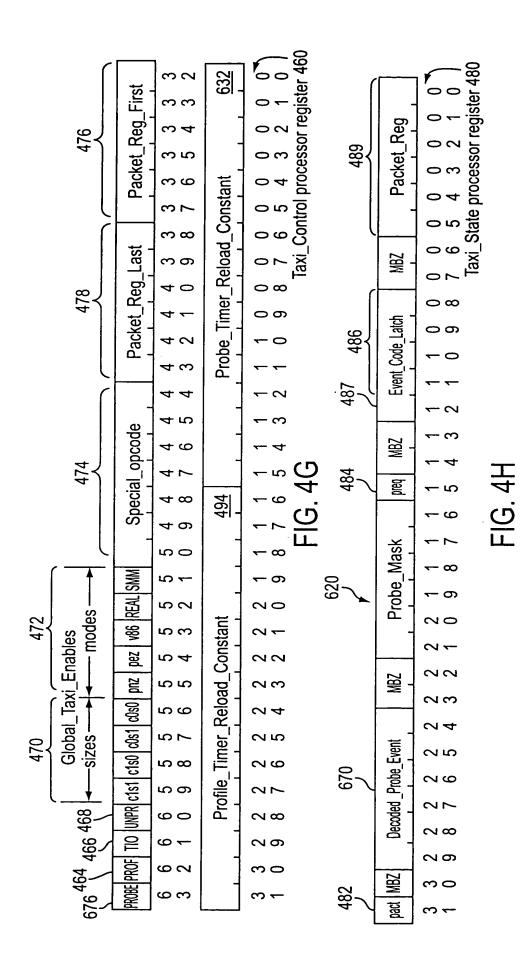


630 Probe_Timer . ဝ စ 6 492 Profile_Timer 27

FIG. 4

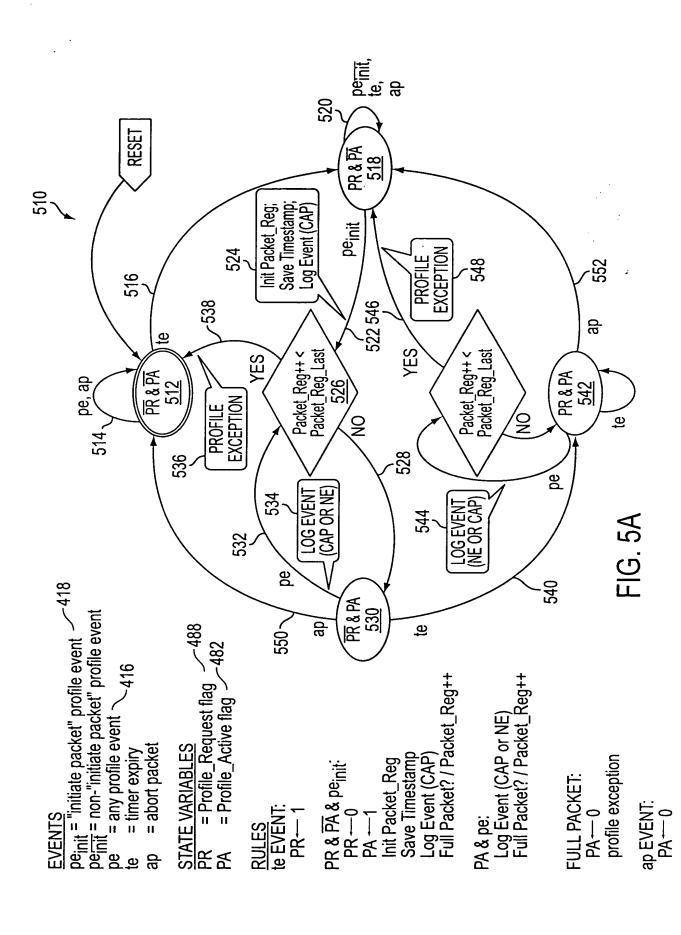

!

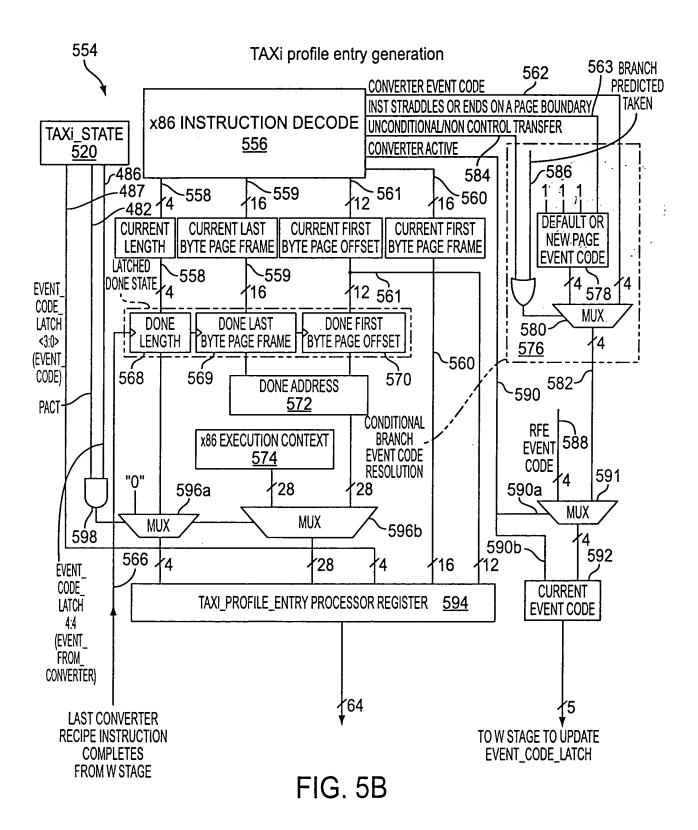

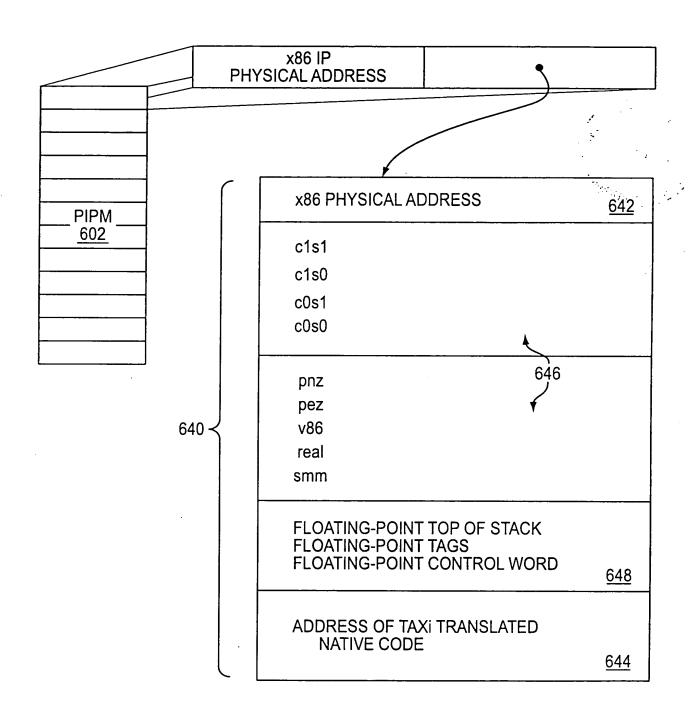
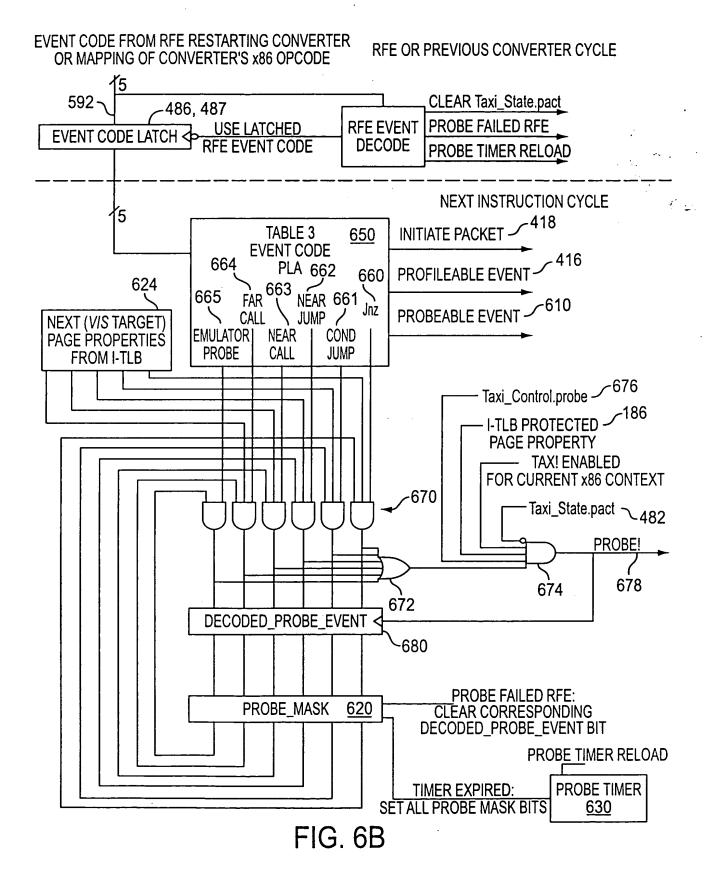
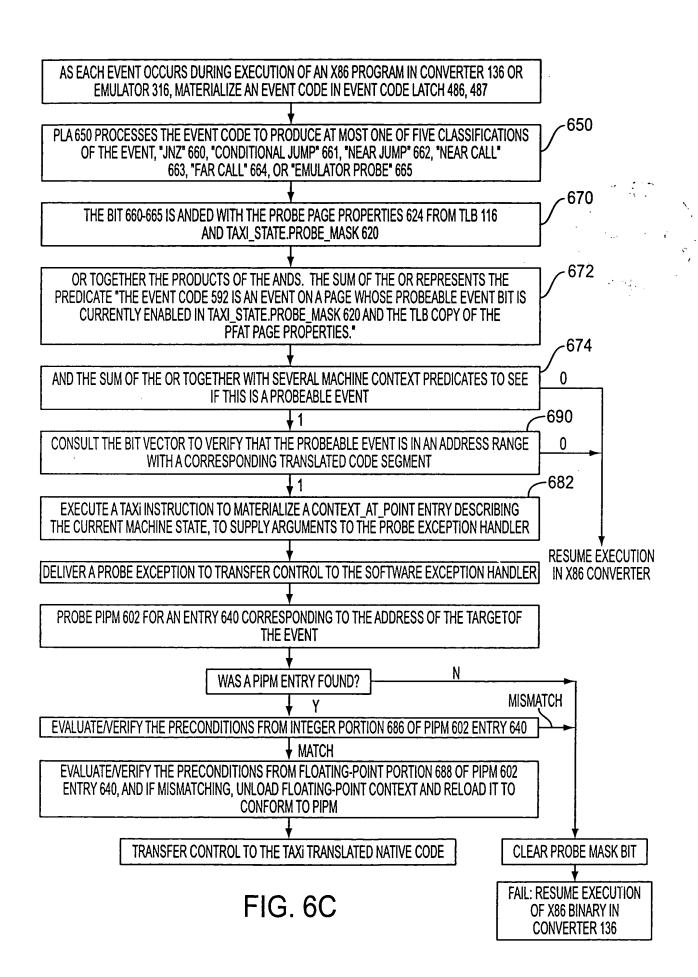
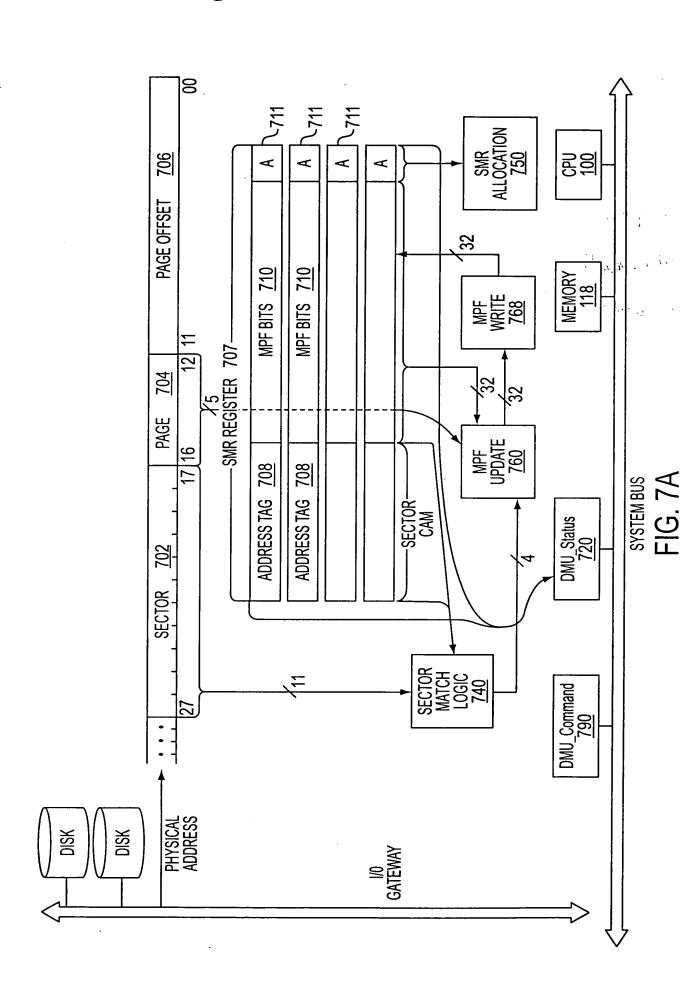


FIG. 6A

1







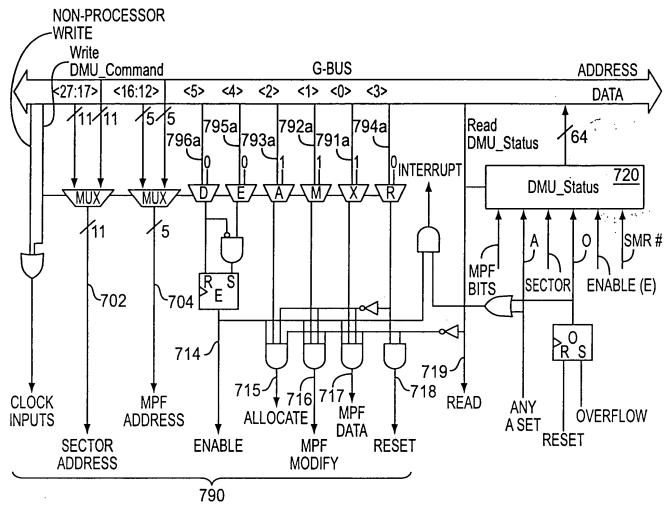


FIG. 7B

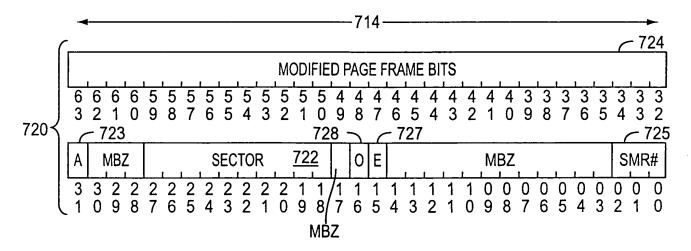


FIG. 7C




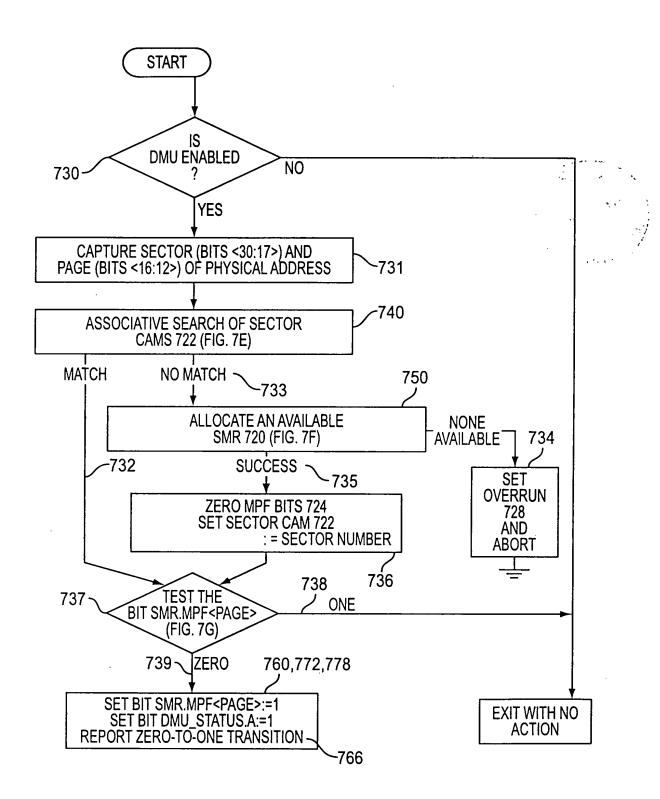



FIG. 7D

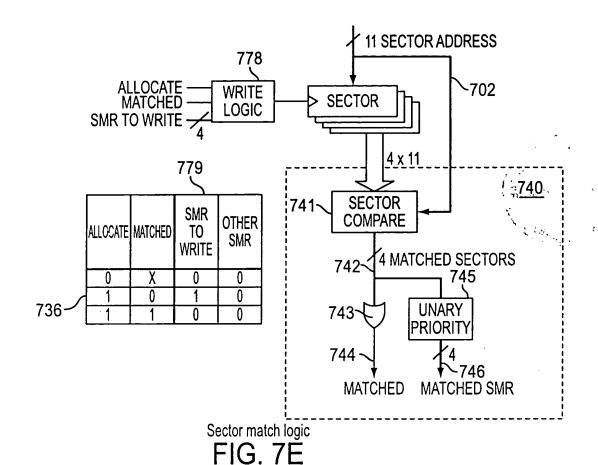

711 711 772 RESET-711 READ MPF ALL 0'S **WRITE** 0 TO 1 MPF TRANSITION **LOGIC** SMR TO WRITE -4 751 753 0TO1 ·773 ⁷⁵⁰⁻ **\754 INACTIVE** SMR TO OTHER TRANSITION **SMR** 719 767 766 WRITE SMR 746 -ALLOCATE MATCHED SMR MATCHED. 744 MATCHED **MPF** 744 MUX WRITE DATA **READ** ALL WRITE DATA 0'S <u>774</u> <u>775</u> <u>776</u> <u>777</u> SMR TO READ MUX 0 787 READ 0 0 0 -728 0 0 0 X 0 0 0 0 0 . SMR TO WRITE **OVERFLOW** 0 SMR Allocation logic FIG. 7F 753

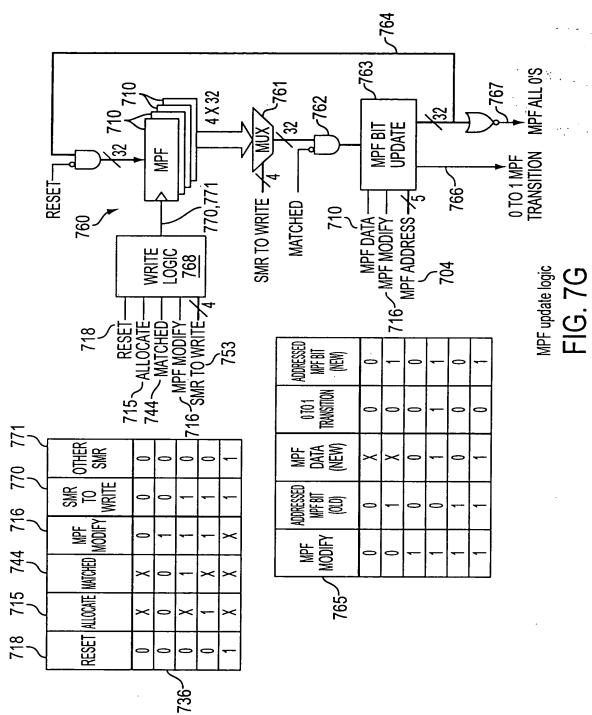

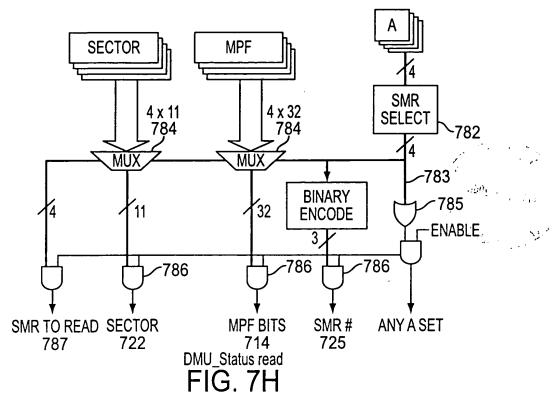

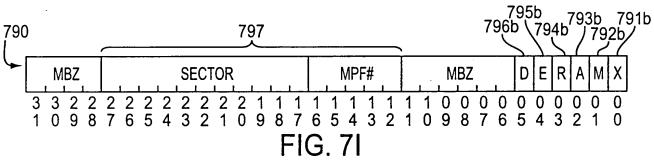

COMMAND BIT	BIT POSITION	MEANING
D	5	DISABLE MONITORING OF DMA WRITES BY CLEARING THE DMU ENABLE FLAG
E	4	ENABLE MONITORING OF DMA WRITES BY SETTING THE DMU ENABLE FLAG
R	3	RESET ALL SMRS: CLEAR ALL A AND MPF BITS AND CLEAR THE DMU OVERRUN FLAG
Α	2	ALLOCATE AN INACTIVE SMR ON A FAILED SEARCH
M	1	ALLOW MPF MODIFICATIONS
X	0	NEW MPF BIT VALUE TO RECORD ON SUCCESSFUL SEARCH (OR ALLOCATION)

М	ΙX	ACTION
0		INHIBIT MODIFICATION OF THE MPF BIT
1	0	CLEAR THE CORRESPONDING MPF BIT
1	1	SET THE CORRESPONDING MPF BIT


FIG. 7J

800) ¥	TIO 810 EX	(T<1:	0>									
EN	PR	ASI<2:0>	R	W	Х	PAGE	В	D	G	-	LIMIT[19:0]	BASE[31:0]	
63	62	61 59	58	57	56	55	54	53	52	51	32	31	0

SIZE	BIT(S)	NAME	FUNCTION
1	63	SEG.EN	ENABLES SEGMENT LIMIT/PROTECTION CHECKING
1	62	SEG.PR	CHOOSES WHICH PROTECTION BITS TO USE FOR PAGE TABLE PROTECTION - (0 MEANS PSW.UK OR 1 MEANS MISC.UK)
3	61:59	SEG.AS	ADDRESS SPACE (ONLY USED WHEN SEG PAGE IS 0)
		SEG.TIO, SEG.EXT	ADDRESS SPACE EXTENSION (ONLY USED WHEN SEG.PAGE IS 1)
3	58:56	SEG.RWX	READ/WRITE/EXECUTE '1' MEANS ENABLED - ALL 000 MEANS IT'S AN INVALID SEGMENT
1	55	SEG.PAGE	ENABLES THE PAGING SYSTEM (TRANSLATION AND CHECKING)
1	54	SEG.B	SEGMENT SIZE (1 MEANS 32-BIT, 0 MEANS 16-BIT)
1	53	SEG.D	SEGMENT DIRECTION (0 MEANS EXPAND UP)
1	52	SEG.G	SIZE OF LIMIT (1 MEANS IT'S IN 4k PAGES)
20	51:32	SEG.LIMIT	SEGMENT LIMIT
32	31:0	SEG.BASE	SEGMENT BASE

FIG. 8A

AT CODE GENERATION TIME:

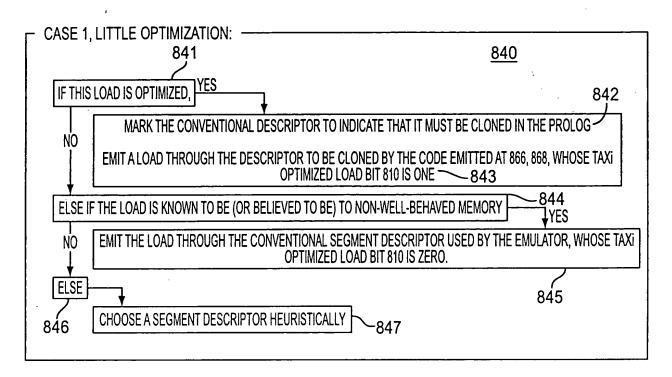

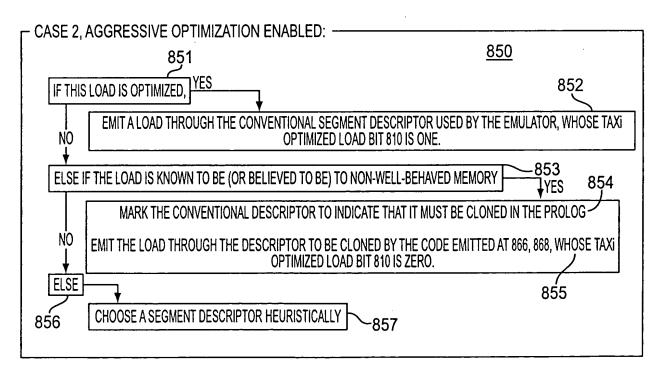


FIG. 8B

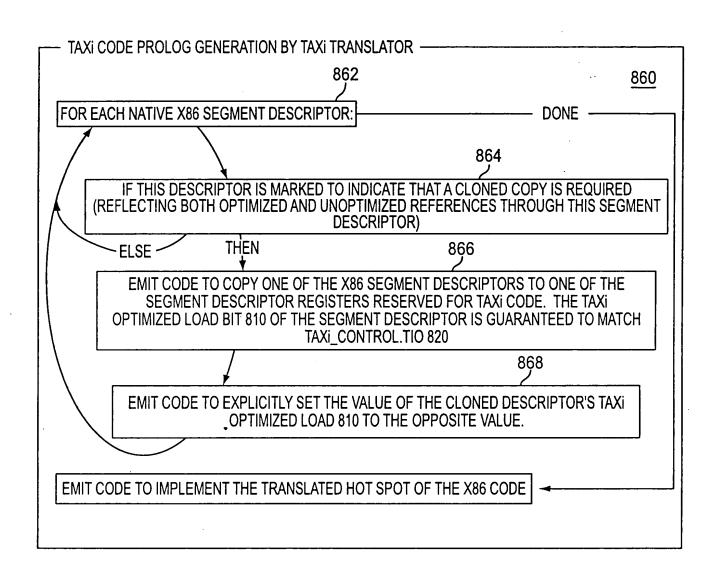


FIG. 8C